


- ▶ Inspect the **TRADIE FOLDING SCAFFOLD** for any obvious signs of damage, worn or missing parts.
 - ▽ The Rapid comprises of a 5-rung and 7-rung folding one-piece base unit mounted on locking castors.
 - ▽ A working platform is supplied that should only be fitted to the lower 4-rungs of the frame.



- ▶ Lock the 2 castors on one frame of the base unit.
- ▶ Simply open the base unit by rolling the other frame outwards until the folding diagonal braces extend as far as possible.
- ▶ Grab both diagonal braces at the VX Joint and with the index finger on both hands depress the steel lug which will snap the joint in the fixed position. Ensure fingers are clear of VX-joint as this is a pinch point.

- ▶ Access and egress from the **TRADIE FOLDING SCAFFOLD** should be through the end of the **TRADIE FOLDING SCAFFOLD**; entry through the side may cause the **TRADIE FOLDING SCAFFOLD** to tip over.
- ▶ Disassembly of the **TRADIE FOLDING SCAFFOLD** is the reverse to the above.

- ▶ Lock the 2 castors on the other frame.
- ▶ Fit the platform at the desired platform height (only the lower 4-rungs of the **TRADIE** frame must be used).

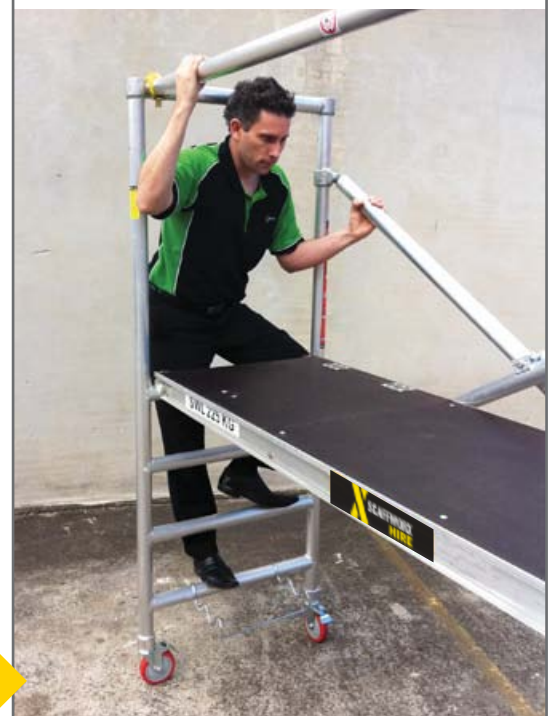

- ▶ Fit the Handrail on the opposite side of the diagonal braces.
- ▶ The **TRADIE FOLDING SCAFFOLD** can only be used on hard level surfaces.